

## How do I interpret the numbers in the wind direction sensor results?

Lindsay Starke - 2026-04-02 - [Comments \(0\)](#) - [Sensors and Modules](#)

The units along the y-axis are degrees, just as one would see on a compass. The cardinal directions are 0°/360° (North), 90° (East), 180° (South), and 270° (West). In the example below from Kindly Octopus, on December 13, you see a wind direction of 220°, indicating that the wind that day was coming from 5 degrees South-Southwest.

